

APRILIA

RSV4 my 09/19


(RSV4 – RSV4 1000R – RSV4 1000RR – RSV4 1000RF)

product	code	description
Steering damper kit	SD.A107K	SDK (stock)
Steering damper kit	SD.A107R	SDR (stock)
Monoshock (R-L-P)	MA109.1KD	M46KD std
Monoshock (R-L-HP)	MA109.1KDIS	M46KD+IS hydraulic spring preload
Monoshock (C-R-L-P)	MA109.21K	M46K std
Monoshock (C-R-L-HP)	MA109.21IS	M46K+IS hydraulic spring preload
Monoshock (CH-CL-R-L-HP)	MA109.21R	M46R Racing (IS preload unit)
Fork kit (fork Showa) (RSV4 1000R 09/10)	FA108KS	FKS Spring kit
Fork kit (fork Showa) (RSV4 1000R 09/10)	FA108RK	FRK Hydraulic kit
Fork kit (C-R-P) (showa) (RSV41000R 09/10)	F20A108K	F20K "quad valve" Hydraulic Cartridge kit
Fork kit (C-R-P) (showa) (RSV41000R 09/10)	F25A108R	F25R Hydraulic Cartridge kit
Fork kit (C-R-P) (showa) (RSV41000R 09/10)	F25A108SA	F25SA Sealed Hydraulic Cartridge kit
Fork kit (C-R-P) (fork type Ohlins) (RSV4 1000 Factory 11/15 & RacingFactory 15/16)	F20A110K	F20K "quad valve" Hydraulic Cartridge kit
Fork kit (C-R-P) (fork type Ohlins) (RSV4 1000 Factory 11/15 & RacingFactory 15/16)	F25A110R	F25R Hydraulic Cartridge kit
Fork kit (C-R-P) (fork type Ohlins) (RSV4 1000 Factory 11/15 & RacingFactory 15/16)	F25A110SA	F25SA Sealed Hydraulic Cartridge kit
Fork kit (C-R-P) (fork type Sachs) (RSV4 1000R 11/14 & RSV4 1000RR 15/19)	F20A111K	F20K "quad valve" Hydraulic Cartridge kit
Fork kit (C-R-P) (fork type Sachs) (RSV4 1000R 11/14 & RSV4 1000RR 15/19)	F25A111R	F25R Hydraulic Cartridge kit (*)
Fork kit (C-R-P) (fork type Sachs) (RSV4 1000R 11/14 & RSV4 1000RR 15/19)	F25A111SA	F25SA Sealed Hydraulic Cartridge kit

(*) compression valve not included



High speed
Low speed
Compression
adjustment

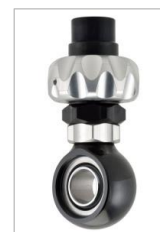

Rebound
adjustment




Length
adjustment

APRILIA

RSV4 my 09/19

(RSV4 – RSV4 1000R – RSV4 1000RR – RSV4 1000RF)

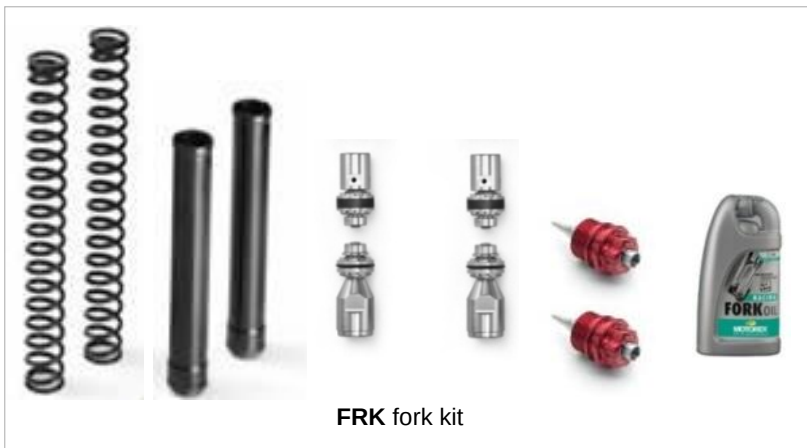

CH = HighSpeed Compression adjustment / regolazione Compresione AV
CL = LowSpeed Compression adjustment / regolazione Compresione BV
C = Compression adjustment / regolazione Compressione
R = Rebound adjustment / regolazione Estensione
L = Length adjustment / regolazione Interasse
P = Spring preload / precarico molla
HP = Hydraulic spring preload / precarico molla idraulico